


Instruction Manual

MS6531B

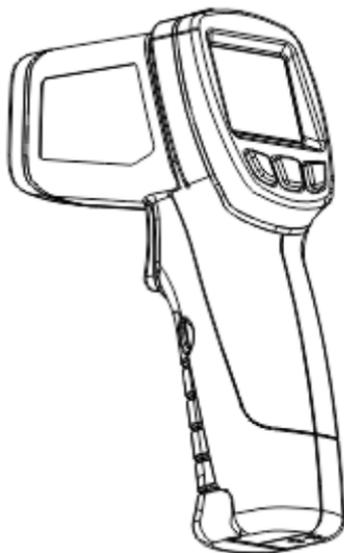

Please read carefully before operating and keep this manual for reference.

Contents

1. Introduction	2
2. Features.....	2
3. Uses.....	3
4. Safety Information	3
5. Distance to Spot Ratio.....	4
6. Technical Specifications.....	5
7. Buttons and Components	7
8. Display Description.....	8
9. Operating Instructions	9
10. Additional Notes	13
11. Accessories and Table of Emissivity.....	15

1. Introduction

Thank you for purchasing our infrared thermometer. This product is a professional, hand-held meter for non-contact infrared temperature measurement. It is simple to use, highly accurate, and with a wide temperature range.

2. Features

- Fast measurement
- Non-contact infrared measurement
- Built-in dual laser sight for faster and more accurate targeting
- Adjustable Emissivity: 0.1 to 1.0 range for multiple surface types
- Temp. unit conversion, maximum, minimum, average, difference displays
- Resolution: 0.1°C (0.1°F)
- High/low temperature alarm settings
- Automatic range, data hold, and auto power functions

3. Uses

This product is widely used in food services, security, fire prevention, chemical, storage, and transport industries

4. Safety Information

- When laser beam is active, use with caution
- DO NOT aim laser beam at a person's/animal's eyes
- DO NOT use the laser beam near explosive gas



5. Distance to Spot Ratio

The distance to spot ratio (D:S) for this meter is is: 12:1.

Example: Measurement from a distance of 300mm away will produce a measurement spot of approx. 25mm in diameter. Figure 1 shows a diagram of how distance to spot ratio works.

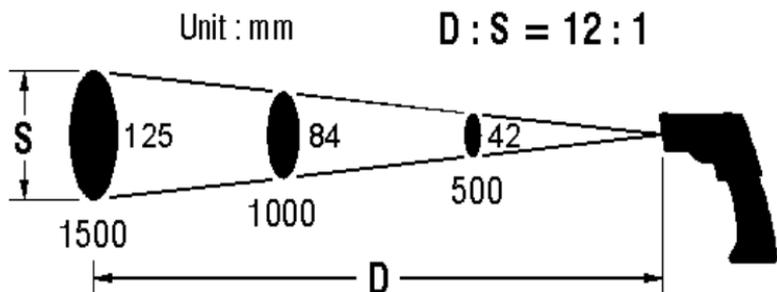


Figure 1

6. Technical Specifications

Model	MS6531B	
Range	IR: -40~800°C/-40~1472°F	
Accuracy	IR: -40~0°C/-58~32°F: $\pm 4^{\circ}\text{C}/7.2^{\circ}\text{F}$	
	IR: 0~400°C/32~752°F: $\pm 1.5\%$, $\pm 2^{\circ}\text{C}/3.6^{\circ}\text{F}$	
	IR: 400~800°C/752~1472°F: $\pm 2\%$, $\pm 2^{\circ}\text{C}/3.6^{\circ}\text{F}$	
D:S	12:1	
Emissivity	Adjustable: 0.10~1.0	
Resolution	0.1°C(0.1°F)<199.9, 1°C(1°F)>199.9	
Response Time	<500ms	
Spectral Response	8~14μm	
Low/High Alarm	Low	High
Polarity Display	Automatic (no indication for positive)	"-" indicates negative
Laser Pointers	Output: <1mW, 630~670nm, class 2 (II) laser	
Auto Power Off	IRT will turn off after 30s of non-use	
Operating Temperature	0°C~50°C/32°F~122°F	
Storage Temperature	-20°C~60°C/-4°F~140°F	
Relative Humidity	Operating: 10~90% RH, Storage: <80% RH	
Battery	9V battery	
Weight	250g	
Dimensions	95x83x192mm	
Safety	Compliance with European CE safety standards	

Note:


- Calibration is carried out at a temperature between 18°C and 28 °C (64°F to 82°F) and relative humidity below 80%.
- Make sure that the target is larger than the meter's visual spot size. The smaller the target, the closer the meter should be.

7. Buttons and Components


1: Laser Sight:2: Infrared Sensor

3: Measurement Trigger:4: Battery Cover

6: Mode Button:7: Laser/Backlight Button:8: Temp. Unit Button:9: LCD Display

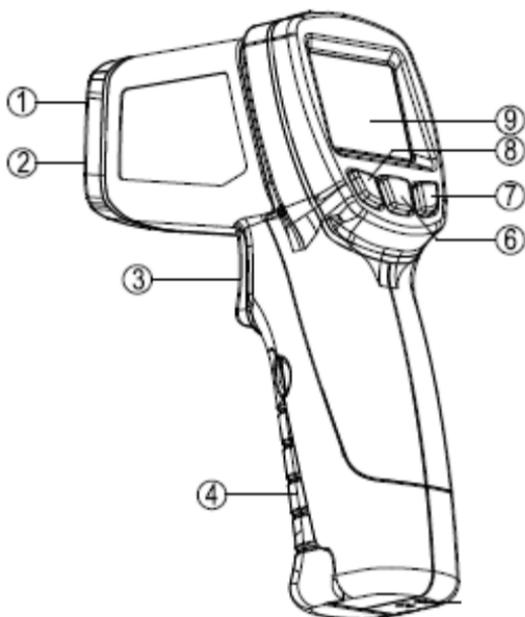

8. Display Description

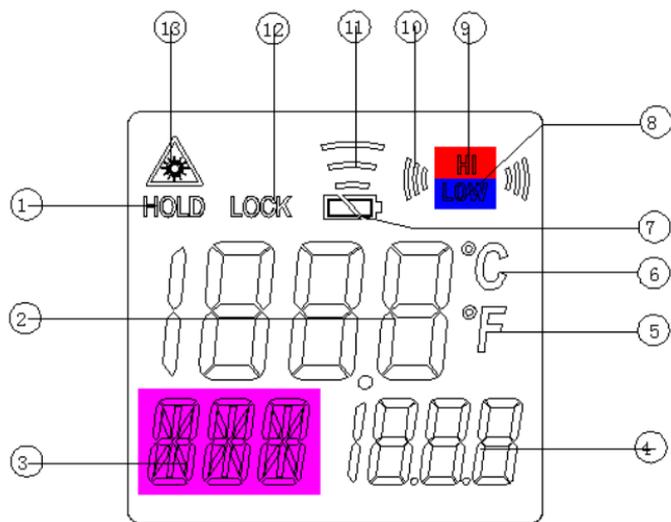

1. Display Hold
2. Main Measurement Display
3. Mode
4. Secondary Measurement Display
5. Fahrenheit
6. Celsius
7. Low Battery
8. Low Alarm Indication
9. High Alarm indication
10. Buzzer Indication
11. Measurement Indication
12. Measurement Lock
13. Laser Pointers On/Off

9. Operating Instructions

9.1 Measurement

1. Point the meter at the object to be measured.
2. Hold down the trigger to begin measurement. The “” symbol flashes on the top of the display to indicate measurement is taking place.
3. The main measurement display show the current temperature reading of the measured surface.
4. Release the trigger and “HOLD” symbol will appear in the upper left corner and the display will hold the last reading.
5. The meter’s auto off function will turn off the meter 30s after releasing the trigger.

Note:

- Environmental temperature can affect the accuracy of the reading. It is recommended the meter be placed in the measurement environment for 30 min. prior to taking measurement.
- Laser can be turned off for measurements at close range to conserve battery power.

9.2 Settings

Emissivity: default emissivity is 0.95

To change emissivity: press “MODE” until the bottom left shows the “E” symbol with two arrows pointing up and down. Press the up and down buttons to adjust the emissivity. Emissivity range: 0.1-1.0.

To show the maximum recorded value: press “MODE” until “MAX” appears on the bottom left corner of the display.

To show the minimum recorded value: press “MODE” until “MIN” appears on the bottom left corner of the display.

To show the difference between the minimum and maximum values: press “MODE” until “DIF” appears on the bottom left corner of the display.

To show the average recorded value: press “MODE” until “AVG” appears on the bottom left corner of the display.

To set the high alarm level: press “MODE” until “HAL” appears on the bottom left corner of the display. Press the up and down buttons to set the alarm level.

To set the low alarm level: press “MODE” until “LAL” appears on the bottom left corner of the display. Press the up and down buttons to set the alarm level.

When the high and low alarms are set, the meter will beep if the temperature measured is above the high level or below the low level. In addition, the main display will show “Hi” or “Lo” and the icon in the top right corner will turn red or blue to indicate high or low alarm respectively.

To turn on/off the laser pointers: during measurement, press the down button to switch between the laser pointers on or off.


To turn on/off the backlight: during measurement, press the up button to turn on or off the backlight.

To switch between °C and °F: while in HOLD mode, press the down arrow to switch temperature units.

To lock the thermometer into measurement: While in HOLD mode, press the up button and the thermometer will begin measuring and continue to measure until the up button is pressed again.

9.3 Battery Replacement

When the battery is running low, the  symbol will appear indicating the battery needs to be replaced. Open the battery cover and replace the old battery with a new 9V battery.

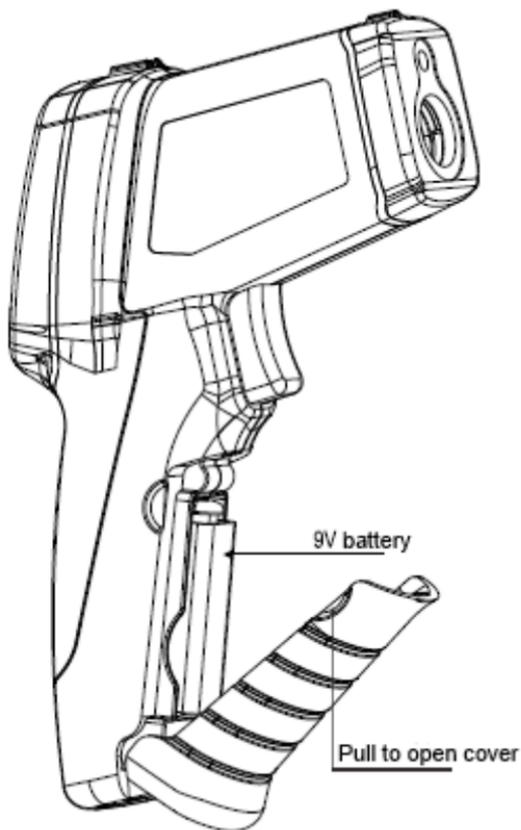

10. Additional Notes

10.1 Thermometer

- Infrared thermometers are used to measure surface temperature.
- The sensor collects infrared energy and is gathered in the detector circuit and converted into a temperature reading for display.
- The laser pointers are only used for aiming purposes

10.2 Surfaces

- Make sure the object to be measured is larger than the diameter of the thermometer's spot field.
- The smaller the target, the closer the meter should be.

10.3 Distance to Spot Size

- As the distance between the surface to be measured and the meter increases, the spot increases by the ratio of 12:1.

10.4 Hotspot positioning

- To find a hotspot, aim the thermometer outside the area to be measured and then move it around within the correct area to find the hotspots.

10.5 Tips

- Not recommended for measuring on light metal or smooth metal surfaces such as stainless steel, aluminum, etc.
- Sensor cannot penetrate through transparent surfaces such as glass.
- Steam, dust, smoke, etc. block the sensor from picking up infrared energy, thus decreasing its accuracy.

10.6 Warranty

- Clean the meter regularly with a dry cotton cloth. DO NOT use any type of chemicals or detergents.
- Maintenance and repairs should only be done by qualified personnel.
- DO NOT immerse the thermometer in water.
- DO NOT store the thermometer in an area with high temperature or high humidity.

10.7 Emissivity

- Emissivity characterizes the type material and the amount of radiant energy given off by the material. Most organic materials and painted/oxidized surfaces have an emissivity of 0.95.

11. Accessories and Table of Emissivity

11.1 Accessories

- Instruction Manual
- Warranty Card
- 9V Battery
- Type-K Thermocouple
- Hook

11.2 Table of Emissivity

Material	Emissivity	Material	Emissivity
Aluminum	0.30	Glass	0.90 to 0.95
Asphalt	0.95	Iron Oxides	0.78 to 0.82
Concrete	0.95	Paint	0.80 to 0.95
Asbestos	0.95	Plastic	0.85 to 0.95
Ceramics	0.95	Paper	0.70 to 0.94
Brass	0.50	Plaster	0.80 to 0.90
Brick	0.90	Rubber	0.95
Carbon	0.85	Wood	0.90
Sludge	0.94	Textile	0.94
Frozen Food	0.90	Lead	0.50
Hot Food	0.93	Marble	0.94
Ice	0.98	Cloth (black)	0.98
Snow	0.90	Sand	0.90
Human Skin	0.98	Water	0.93